



KR-TAMTOPBRICKS INSTALLATION

TAMARACK BAFFLE FIREBRICKS

*No tools are needed for installation

ASSEMBLY:

1. Please study the drawings of the stove cut-away and brick layout on the reverse side of this page which shows the position of the (A) firebrick, (B) T-Bar, (C) Z-Bar and (D) ceramic wool blanket. These will all install directly above the 3 secondary burn tubes at the firebox top.

2. Install T-bar: The function of the T-bar is that it provides a resting support for the 2 rear firebricks and the front 4 firebricks. Insert the T-bar into the upper firebox so that it spans the firebox side to side in the location shown in the drawing. It will be necessary to angle this part up and in between the burn tubes. It will rest on a ledge on the firebox left and right sides. Its correct position would represent an upside down "T".

3. Install 2 rear firebrick as shown in drawing. Note the drawing showing a top view of firebrick locations. The rear edge of the firebrick will rest on a ledge at the stove back and the front edge of these 2 firebrick will rest on the T-bar as shown. Push T-bar and firebrick back all the way and center the 2 bricks side to side.

4. Install Z-bar. This Z-bar functions simply as a resting support for the 4 front firebrick. It will be necessary to angle the Z-bar up into the firebox top between the front and middle burn tubes. Once up in place, rotate the Z-bar until the tallest leg of the Z-bar is pointing up, and the shortest leg of the Z-bar is pointing down and hooked over the back of the front burn tube.


5. Install 4 front firebrick as shown in the drawing. Install the first brick up into the firebox top, inserting it up between the front and middle burn tubes and then slide forward until it drops into place between the T-bar and the front Z-bar as shown. Slide this brick to the far left. Repeat procedure for the remaining 3 bricks and drop into place. Next, slide all the 4 bricks together so there is no gap between them and center the 4 bricks in the firebox (there will be about 3/4" space on the left and right sides). Then push the entire assembly toward the stove back by pushing back on the Z-bar.

6. Insert the blanket roll in to the firebox through the 6" flue collar hole and place the roll all the way to one side and unroll the blanket so as to cover the entire firebrick baffle assembly. Shift the blanket if necessary in order to straighten out the blanket. Be sure the blanket is laying flat. *Note: You may want to wear gloves to install this blanket as the ceramic fibers in the blanket can irritate the skin.*

Your secondary burn baffle system is now complete. Please contact your dealer if you have any questions or if you are not sure it is installed correctly. This system greatly increases your stove's efficiency as it functions to pre-heat and ignite smoke or gases that are not burned in the coal bed. Please follow all instructions in your manual for safe operation of your stove.

CONTINUED ON REVERSE SIDE.

MODEL HT/TAMARACK
Secondary burn baffle system installation instructions.

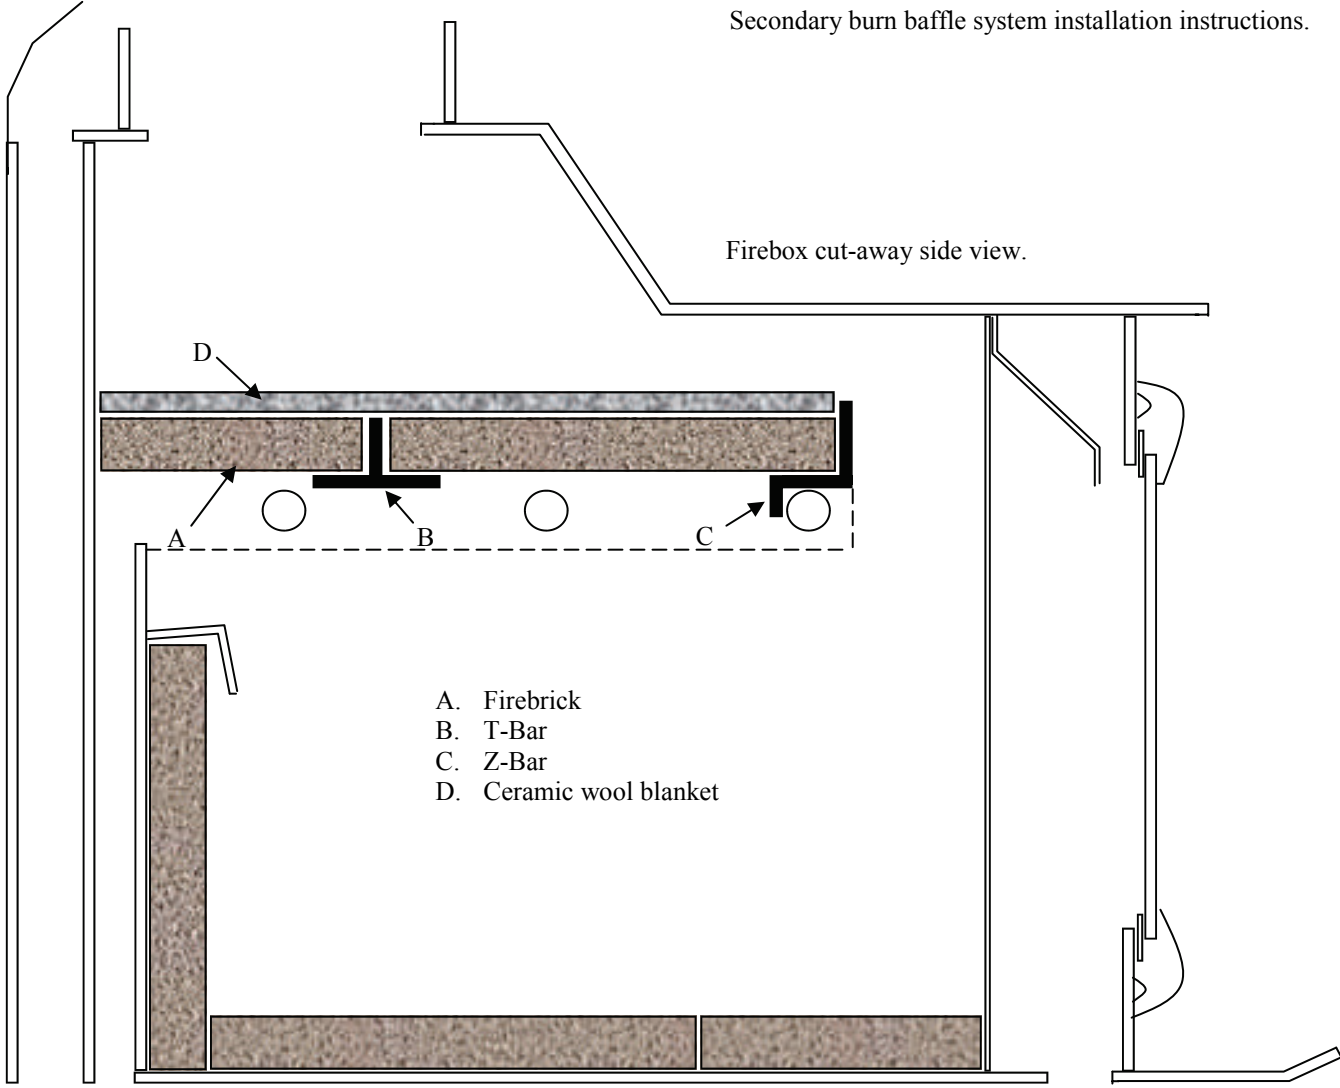

Top view of baffle brick layout

